INSTALLATION INSTRUCTIONS MODEL (-)XRF - FCB1 0-35% MOTORIZED OUTSIDE AIR

The 0-35% motorized outside air system is designed to replace the unit duct cover. No drilling on the unit or field assembly is required. A 2-position control motor that opens the intake damper when the blower is energized. The amount of air is controlled by the a slide damper on damper motor. The intake panel is fully insulated.

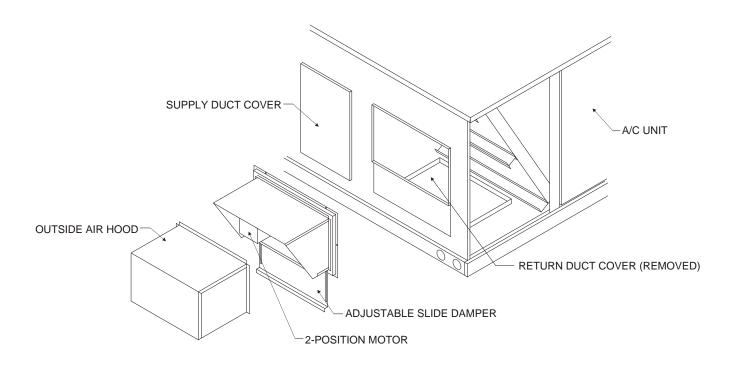


FIGURE 1

Step 1:

Check for correct number of parts. See list below:

1 ea. - Outside Air Intake damper assembly with hood and slide damper.

Step 2:

Remove return air duct cover from unit, and save the screws.

Step 3:

Remove filter access panel. Plug the "PL5" connector to "PL2" connector in return section.

Step 4:

Install outside air assembly as shown in Figure 1 over duct opening with the screws removed in Step 2.

Step 5:

Adjust the slide damper to the desired position.

