

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION AIRFLOW	UGPH 04 A U S	UGPH 05 A U E	UGPH 05 B M K	UGPH 06 A U E	UGPH 07 A M G	UGPH 07 A U E	UGPH 07 B R K
HEAT EXCHANGER, BURNER / MANIFOLD									
23	Stk	Heat Exchanger Assembly	AS-61579-01	AS-61579-09	AS-61579-10	AS-61579-08	AS-100560-01	AS-100560-01	AS-61579-11
		Heat Exchanger Bracket (2)	AE-67846-02	AE-67846-02	AE-67846-02	AE-67846-02	AE-67846-02	AE-67846-02	AE-67846-02
6	Stk	Burner Tube w/Shield - Before F1399	75-22840-02 (2)	75-22840-02 (2)	75-22840-02 (2)	75-22840-02 (3)	75-22840-02 (3)	75-22840-02 (3)	75-22840-02 (3)
6	Stk,3	Burner Assembly - On or After F1399 (See Note 3)	AS-60993-02	AS-60993-02	AS-60993-02	AS-60993-03	AS-60993-03	AS-60993-03	AS-60993-03
7a		NOX Burner Insert - Before F0299	AE-61771-01 (2)	AE-61771-01 (2)	AE-61771-01 (2)	AE-61771-01 (3)	AE-61771-01 (3)	AE-61771-01 (3)	AE-61771-01 (3)
7a		NOX Burner Insert (Cross X) - On or After F0299	AS-67875-01 (1)	AS-67875-01 (1)	AS-67875-01 (1)	AS-67875-01 (2)	AS-67875-01 (2)	AS-67875-01 (2)	AS-67875-01 (2)
7b		NOX Burner Retainer Rod - Before F0299	AE-61715-01	AE-61715-01	AE-61715-01	AE-61715-02	AE-61715-02	AE-61715-02	AE-61715-02
7b		NOX Insert Retainer - On or After F0299	AE-67872-01	AE-67872-01	AE-67872-01	AE-67872-02	AE-67872-02	AE-67872-02	AE-67872-02
		Burner Support - Before F1399	AE-61577-01	AE-61577-01	AE-61577-01	AE-61577-02	AE-61577-02	AE-61577-02	AE-61577-02
		Burner Support - On or After F1399	AE-60997-01	AE-60997-01	AE-60997-01	AE-60997-02	AE-60997-02	AE-60997-02	AE-60997-02
8		Burner Support Bracket - Before F1399 (2)	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01
8		Burner Support Bracket - On or After F1399 (2)	AE-61588-02	AE-61588-02	AE-61588-02	AE-61588-02	AE-61588-02	AE-61588-02	AE-61588-02
9	Stk	Manifold (w/o Orifices)	AS-61663-01	AS-61663-01	AS-61663-01	AS-61663-02	AS-61663-02	AS-61663-02	AS-61663-02
		Burner Orifice - Natural Gas	See Orifice Selection Chart						
		Burner Orifice - LP	See Orifice Selection Chart						
		Number of Orifices	(2)	(2)	(2)	(3)	(3)	(3)	(3)

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION AIRFLOW	UGPH 10 A M E	UGPH 10 B R J	UGPH 10 B R M	UGPH 12 A R J	UGPH 12 A R M	UGPH 15 A R J
HEAT EXCHANGER, BURNER / MANIFOLD								
23	Stk	Heat Exchanger Assembly	AS-61579-07	AS-61579-04	AS-61579-04	AS-61579-05	AS-61579-05	AS-61579-06
		Heat Exchanger Bracket	AE-67846-02	AE-67846-02	AE-67846-02	AE-67846-02	AE-67846-02	AE-67846-02
6	Stk	Burner Tube w/Shield - Before F1399	75-22840-02 (4)	75-22840-02 (4)	75-22840-02 (4)	75-22840-02 (5)	75-22840-02 (5)	75-22840-02 (6)
6	Stk	Burner Assembly - On or After F1399 (See Note 3)	AS-60993-04	AS-60993-04	AS-60993-04	AS-60993-05	AS-60993-05	AS-60993-06
7a		NOX Burner Insert - Before F0299	AE-61771-01 (4)	AE-61771-01 (4)	AE-61771-01 (4)	AE-61771-01 (5)	AE-61771-01 (5)	AE-61771-01 (6)
7a		NOX Burner Insert (Cross X) - On or After F0299	AS-67875-01 (3)	AS-67875-01 (3)	AS-67875-01 (3)	AS-67875-01 (4)	AS-67875-01 (4)	AS-67875-01 (5)
7b		NOX Burner Retainer Rod - Before F0299	AE-61715-03	AE-61715-03	AE-61715-03	AE-61715-05	AE-61715-05	AE-61715-06
7b		NOX Insert Retainer - On or After F0299	AE-67872-03	AE-67872-03	AE-67872-03	AE-67872-04	AE-67872-04	AE-67872-05
		Burner Support - Before F1399	AE-61577-03	AE-61577-03	AE-61577-03	AE-61577-04	AE-61577-04	AE-61577-05
		Burner Support - On or After F1399	AE-60997-03	AE-60997-03	AE-60997-03	AE-60997-04	AE-60997-04	AE-60997-05
8		Burner Support Bracket - Before F1399 (2)	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01
8		Burner Support Bracket - On or After F1399 (2)	AE-61588-02	AE-61588-02	AE-61588-02	AE-61588-02	AE-61588-02	AE-61588-02
9	Stk	Manifold (w/o Orifices)	AS-61663-03	AS-61663-03	AS-61663-03	AS-61663-04	AS-61663-04	AS-61663-05
		Burner Orifice - Natural Gas	See Orifice Selection Chart					
		Burner Orifice - LP	See Orifice Selection Chart					
		Number of Orifices	(4)	(4)	(4)	(5)	(5)	(6)